



**NATIONAL SURGICAL CORPORATION**

# Shelving & Storage Solutions

Customised shelving and storage solutions for the hospital and healthcare industry

ISO 9001  
BUREAU VERITAS  
Certification



National Surgical Corporation  
is certified to  
AS/NZS ISO 9001:2015

*A proudly founded and owned Australian company - providing value to our customers beyond the product*



# Shelving and storage solutions



Chrome wire shelving



Chrome wire mobile units/  
trolleys



Chrome wire baskets



Compactors



Accessories for chrome wire



Racks



Procedure/ crash carts



Apollo storage carts



Underbench racks and carts



Cabinets high density



Cabinets underbench



Salus transport carts



Accessories for high density units



Flowsell pharmacy storage



Height adjustable tables



# for the hospital and healthcare industry

NSC Shelving and Storage Solutions provides hospitals and other healthcare facilities with customised shelving solutions. NSC designed and developed our storage systems specifically for use in the Australian medical industry and can be installed in any department.

As a distributor of medical consumables and instruments, we understand the space and storage requirements of these specialised areas, particularly theatres and CSSD and can design a solution to meet your department's storage needs.

*Quality and performance is of paramount importance to our clients so all our products are manufactured and installed to assist our customers in complying with Australian Standard AS5369 and OH&S requirements.*

Our storage systems work in conjunction with each other and most rooms are now designed with a combination of chrome wire shelving, trolleys, high density storage (Pegasus), chrome wire baskets and accessories.

## Experts in hospital redevelopments and refits

NSC has installed and delivered storage solutions to over 200 customers, mostly hospitals, to assist in redevelopments, fitouts and upgrades.

NSC has the capabilities to design and install large scale hospital redevelopment projects. NSC provides detailed CAD designed drawings to demonstrate the correct scale and size of the shelving site.

## Stocked lines

With thousands of shelving and storage components in our range, it is difficult for us to stock all of these items. We endeavour to stock our most popular sizes and sizes so that your solution is delivered to you quickly.

However, sometimes the delivery of your project may take longer for delivery and installation. We will always advise timeframes when quoting.



# How we support you

## CAD DESIGNED DRAWING

NSC offers a free design consultation to ensure we meet your site requirements and provide a customised shelving solution. CAD drawings demonstrate the correct scale and size for the storage area.


This enables both the customer and NSC to determine the best solution for the site and allows maximum use of space.

Whatever the size or shape of the room, NSC can layout the design with the correct measurements and room shape.


Rooms can be measured during the initial site visits with your hospital or we can work from architects and builders plans.

The visualisation of the CAD drawing assists customers during the decision making process and allows those within the organisation to view the proposal even if they are unknown to the site. This is helpful in the healthcare industry where many departments are involved in the approval process.

The drawings show square metre sizes to accurately show the benefit of the proposed design versus current system.

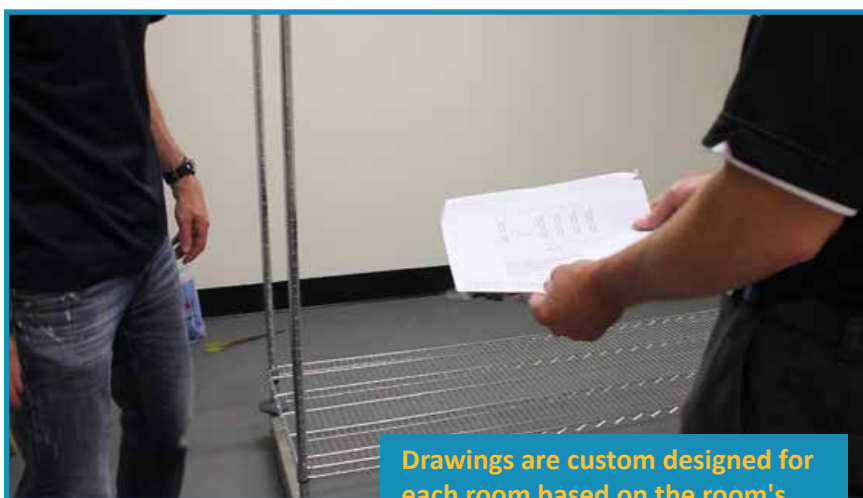


Drawings are custom designed for each room based on the room's storage requirements utilising the most appropriate storage systems

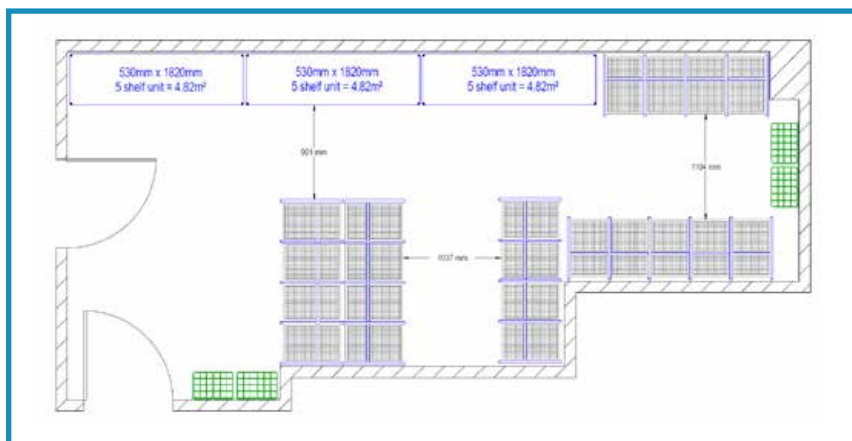

Our drawings outline the square meterage of the area and demonstrates each storage solution in different colours

This 2D CAD drawing details a mixture of compactors, static shelving units, trolleys and existing units

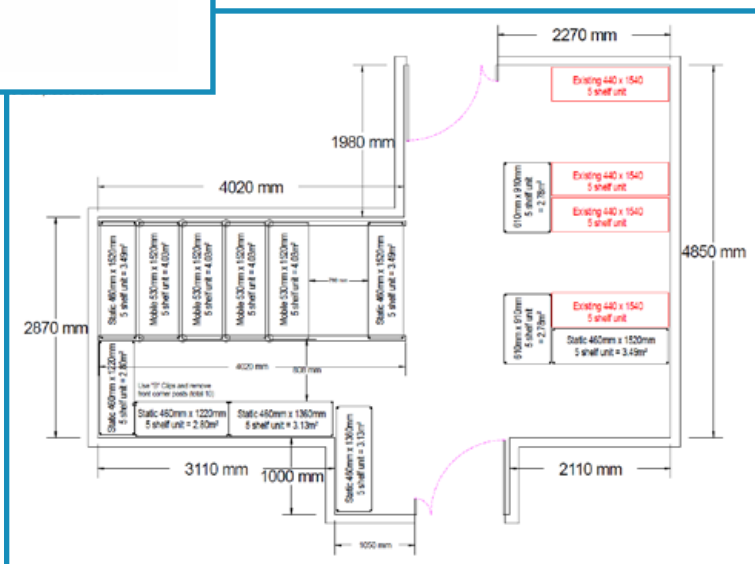



## INSTALLATION

The NSC Storage & Shelving division has experienced installers that oversee the delivery and installation of storage projects to hospitals and other customers throughout Australia.

Our installers coordinate with hospital personnel to ensure that rooms are built to drawing specifications and quotation.

With large shelving and storage projects, NSC recruits local qualified installers to assist in the installation and delivery of the project.

NSC installers are all accredited with the relevant construction industry qualifications (such as General Induction or white cards) in all states they operate in to allow us to meet OH&S requirements on construction sites.

NSC provides service and support to our customers, demonstrating the correct use, maintenance and guidelines of their storage installation. We can assist our customers at any time, with local Account Managers available to visit site and Customer Service available throughout the day.



**Our installers ensure that your project is delivered and installed as per the quotation and drawing specifications**

NSC works with Builders and Architects throughout Hospital Redevelopment and New Builds, ensuring that the project timeframes and budget are met. This is an ongoing process as changes to the project occur.

This can be coordinated through both the Builder and Hospital personnel to develop a solution that is ideal for the Hospital.



# Chrome wire shelving

NSC chrome wire shelving systems are contract manufactured specially for NSC to our specifications which have been **designed specifically for the Australian medical industry**

Features:

- High quality chrome wire
- Allows air to circulate and helps prevent dust collection
- Reduces time, labour and frequency of cleaning
- Commercial grade chrome wire
- High load capacity and structural rigidity
- Lightweight when unloaded
- Height adjustable shelves
- Wide range of accessories

**NSC chrome wire shelving systems are constructed from high quality chrome plated steel and come with a 2 year warranty**

Chrome wire shelving units are ideal for:

- Theatre store rooms
- CSSD storage, sterile stock, set-up trolleys
- Equipment and ward store rooms
- Treatment rooms, surgical units
- Day surgeries
- Fluid storage
- Emergency departments
- ICU

## STATIC CHROME WIRE SHELVING

- Various sizes to fit within any storage area
- Installed with adjustable feet to secure to any flooring
- Adaptable for any area
- Shelf heights can be adjusted to suit your storage needs
- Can be built side-by-side and back-to-back
- Each shelf can hold up to 150kg, total unit up to 500kg per unit




NATIONAL SURGICAL CORPORATION



## CHROME WIRE TROLLEY/ MOBILE UNITS

- Trolley units allow safe and fluid movement around departments
- Installed with heavy duty 125mm castors (2 swivel, 2 brake)
- Shelf heights can be adjusted to suit your storage needs
- Each shelf can hold up to 150kg, total unit up to 400kg per unit

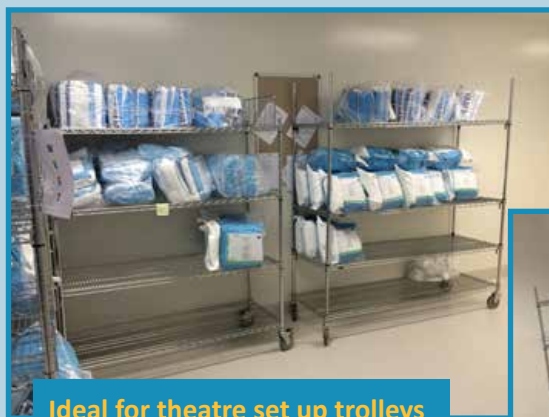

Ideal for theatre set up trolleys



Heavy duty castors



## PVC COVERS

- Manufactured in Australia from high quality, clear PVC
- Comes standard with 2 durable front zippers (on edge of both sides)
- Custom made to any size
- Available in different colours on request
- Logos or text can be applied on the cover
- Optional accessories:
  - 'Stay-put', strap to hold the flap up whilst rolled open
  - Openings on sides or rear for handles
  - Pouches to store paperwork
  - Additional zippers



# Stainless steel shelving

NSC stainless steel wire shelving systems are manufactured in high quality and durable 202 stainless steel which can be used in various wet areas, cool rooms and freezers.

Ideal for use in:

- Medical cool rooms
- Hospital kitchen cool rooms and freezers
- Pharmacy and pharmaceuticals research cool rooms
- Cleaners store rooms
- Autopsy rooms
- Chemical storage areas
- Wet areas



## When to use stainless steel?

Stainless steel is usually only used in wet areas, high humidity or for caustic environments. Most of the products NSC install are chrome wire, which look very similar to stainless steel and are high quality, and when used in air-conditioned areas for dry storage, will last for decades.

Stainless steel is also much higher value than chrome wire.

### How can you tell the difference between stainless steel and chrome?

Stainless steel tends to have a yellowish/gold tinge, otherwise it looks completely the same as chrome



# Wire shelving sizes

## SIZES AVAILABLE

Shelf depths:



460mm  
530mm  
610mm



610mm shelves have 2 support  
bridges for extra load capacity

Shelf widths:



610mm  
760mm  
910mm  
1070mm  
1220mm  
1360mm  
1520mm  
1820mm

Angled:  
910mm  
1220mm

Static shelving & trolleys can be designed and installed with any number of shelves.

We usually recommend 5 shelves for maximum storage capacity and usability

Shelf heights:



Shelving units can be designed and installed at any height.

Recommended 1880mm height for static units



Height is measured from the floor to the top of post  
Recommended 1750mm height for trolley units, including the castors

We will recommend the most appropriate shelving size for your storage room based on the above widths, lengths and heights. This will depend on the size of the room, your storage requirements and the items being stored. There may be various sized shelving and trolley units designed in one room to maximise the space

# Chrome wire baskets

- Versatile baskets to replace the traditional plastic bin
- Dust falls through wire to keep products clean and dust free
- Unique soft edged design - won't damage sterile stock and reduces potential hazards to employees
- Close mesh panels on mini, small and medium sizes prevents small items falling out
- Various styles: maxi baskets, bed/recovery baskets, catheter baskets
- Store consumables, stock, PPE equipment, medical supplies, patient files, documents and other items
- Install wall/louvre panels on wall, inside cupboards, on beds, carts, stack on top of one another or install above benches



## MOUNTING ON WALL/LOUVRE PANELS

The table below shows an overview of the recommended number of NSC chrome wire baskets can be attached to wire wall/louvre panels

		Small maxi basket			Medium maxi basket		Large maxi basket	Extra large maxi basket	Recommended Configuration		
WALL/LOUVRE PANELS	457mm	1	2	3	1	2	1	1	SML	SML	SML
		4	5	6					SML	SML	SML
		7	8	9	3	4	2	2	MED		MED
	914mm	10	11	12	5	6	3	3	MED	MED	
		13	14	15	7	8	4				
		16	17	18				4	LRG		
	1372mm	19	20	21	9	10	5	5	LRG		
		22	23	24	11	12	6				
		25	26	27	13	14	7	6	LRG		
	1829mm	28	29	30				7	X-LRG		
		31	32	33	15	16	8				
		34	35	36	17	18	9	8	X-LRG		

\* Note: Chrome wire catheter baskets small horizontal and large horizontal are similar to small maxi basket.

Vertical catheter baskets can fit 2 across on 914mm and 1829mm louver panels.

Speak with a NSC representative before purchasing

Mini CCWB-08-M baskets are not recommended on wire wall panels or metal louver panels



## CHROME WIRE MAXI BASKETS



CCWB-08-M  
Mini  
155x95x90mm



CCWB-20-M  
Small  
225x135x125mm



CCWB-30-M  
Medium  
235x205x160mm



CCWB-40-S  
Large  
250x420x160mm



CCWB-60-S  
Extra Large  
400x420x210mm

## CHROME WIRE BED/RECOVERY BASKETS



CCWB-15-S  
Small wide  
150x300x130mm



CCWB-35-S  
Medium wide  
150x500x130mm



CCWB-55-S  
Small tall  
150x350x250mm



CCWB-65-S  
Large tall  
150x500x250mm

## CHROME WIRE CATHETER BASKETS



CCWB-25-S  
Small horizontal  
400x130x135mm




CCWB-70-S  
Large horizontal  
600x130x135mm



CCWB-80-S  
Vertical  
150x130x600mm

## BASKET ACCESSORIES

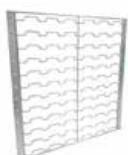

Wire wall panel  
CCWB-PAN-CW  
460x460mm



Metal louvre panel  
CCWB-PAN-SMS  
457x457mm



Plastic louvre panel  
CCWB-PAN-S  
460x460mm



Dividers for baskets  
CCWB-DIV-S (for 40-S)  
CCWB-DIV-S-XL (for 60-S)  
CCWB-DIV-BB-W  
(for 15-S, 35-S)  
CCWB-DIV-BB-H  
(for 55-S, 65-S)




Stacking frames  
CCWB-20-FR (for 20-M)  
CCWB-30-FR (for 30-M)  
CCWB-40-FR (for 40-S)  
CCWB-60-FR (for 60-S)  
CCWB-70-FR (for 70-S)

# Compactors



## Compactors increase storage space by up to 40%

- Overhead rails allow mobile shelving to move along tracks
- Custom built for each storage area
- Ideal for storing goods in areas with space restrictions
- Streamlined movement, even with large or bulky goods
- Versatile system - can be built up to 12 metres long
- Longer spaces can have multiple compactors built

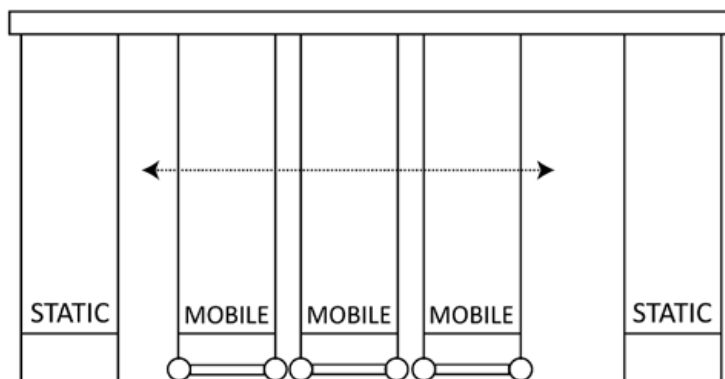

Compactor height = 2100mm

A compactor is made up of various sized shelving units (bays) which move along a top track.

Includes 2 (or 3) static units - one on each end (for longer units there may be a static unit in the middle).

The size of the area will determine the number of mobile bays, these bays move side-to-side for access on both sides.

Compactor length = any size to suit store room





Compactors are versatile systems that can be made to any length



# Accessories

## LEDGES

Ledges can be mounted to the side, rear or front of the shelf to stop items falling off. These are available in 100/300mm heights



Code	Ledge description	Code	Ledge description
CL460	460mm x 100mm side ledge	CLH460	460mm x 300mm side ledge
CL530	530mm x 100mm side ledge	CLH530	530mm x 300mm side ledge
CL610	610mm x 100mm side ledge	CLH610	610mm x 300mm side ledge
CL760	760mm x 100mm side ledge	CLH760	760mm x 300mm side ledge
CL910	910mm x 100mm front ledge	CLH910	910mm x 300mm rear ledge
CL1070	1070mm x 100mm front ledge	CLH1070	1070mm x 300mm rear ledge
CL1220	1220mm x 100mm front ledge	CLH1220	1220mm x 300mm rear ledge
CL1360	1360mm x 100mm front ledge	CLH1360	1360mm x 300mm rear ledge
CL1520	1520mm x 100mm front ledge	CLH1520	1520mm x 300mm rear ledge
CL1820	1820mm x 100mm front ledge	CLH1820	1820mm x 300mm rear ledge

## HANDLES

Handles can be installed on trolleys and mobile bays of compactors to allow fluid movement



CHB round trolley handles



Trolley handle  
(combined with the post)

Code	Description
CHB460	460mm trolley handle
CHB530	530mm trolley handle
CHB610	610mm trolley handle
CN-handle railing 460	460mm 'U' shape handle
CN-handle railing 530	530mm 'U' shape handle
CN-handle railing 610	610mm 'U' shape handle



## SHELF DIVIDERS

Dividers fit on to shelf from front to rear to divide stock and improve organisation



### Code

### Divider description

CSD460	460mm x 200mm divider
CSD530	530mm x 200mm divider
CSD610	610mm x 200mm divider

## SNAKE FRAMES

Snake frames are installed on the base or top of a shelving unit to provide structural support when there are only 1 or 2 shelves installed at a particular height. Snake frames will be installed at the opposite end of installed shelf



### Code

### Description

CHR-460	Snake frame 460mm
CHR-530	Snake frame 530mm
CHR-610	Snake frame 610mm
CHR-760	Snake frame 760mm
CHR-910	Snake frame 910mm
CHR-1070	Snake frame 1070mm
CHR-1220	Snake frame 1220mm
CHR-1360	Snake frame 1360mm
CHR-1520	Snake frame 1520mm
CHR-1820	Snake frame 1820mm

## LABEL HOLDERS

Clear scan label holders are available in long strips which can be cut down to size to suit stored items. Smaller label holders with clips attach to shelf or basket are also available. Printed barcodes, labels and stock identifiers can be easily inserted into the label holders.



Label holders can incorporate barcodes, item descriptions and codes



C SBF26CL1200/914  
Label holder - clear scan,  
cut to size



C LHOL-SML  
Label holder  
with clip 5 x 3cm



C LHOL-LRG  
Label holder  
with clip 7.5 x 3.4cm

### Code

### Label description

C SBF26CL1200	Clear scan label holder 1200mm
C SBF26CL914	Clear scan label holder 900mm
C LHOL-SML	Small label holder with clip - 5x3.5cm
C LHOL-LRG	Large label holder with clip - 7.5x3.4cm
C LABEL CLIPS	Clear scan label clips

## PERSPEX SHELF INLAYS

Perspex shelf inlays (2mm thickness) are placed on top of wire shelves to protect fragile goods such as fluids. Perspex shelves can be removed for cleaning and wipe downs. Built to shelf size. Can be installed on 1 or multiple shelves. Multiple colours available.





## CHROME WIRE BASKETS

See [Page 10](#) for chrome wire baskets range. Baskets can be placed side-by-side on the shelves of all chrome wire shelving, trolleys and compactors and rear-to-rear on compactor mobile bays to access stock on both sides.



Installing accessories on your shelving unit, trolley or compactor can vastly improve the organisation of your stock. This allows for better stock rotation and reduces potential personnel time looking for items. Most accessories are also available in Stainless Steel versions for stainless steel shelving.

### NSC GUARANTEE

Unsure exactly what you need?

An NSC Account Manager will assist you in detailing potential quantities required. Although, any accessory that is ordered and not required can be returned and credited. All shelving accessories are easy to install, however, NSC can arrange for an installer to assist you with this if required.





# Pegasus high density storage

The high density modular storage systems range includes racks, cabinets and carts which all incorporate the interchangeable module system.

The entire system is based on the ISO standard 60x40 and the modules have been designed on this basis.

The modular systems are available as standard units or are custom designed and built using various rack, cabinet or cart options to suit your storage parameters.

These modular systems are ideal for storing, organising and transporting theatre consumables, CSSD sterile stock, medicines, pharmacy items, anaesthetics, sutures and small consumables

## **Why use the Pegasus high density modular system:**

- Maximise storage capacity and organisation
- Reduce overall inventories through stock rotation
- Improve the aesthetics of your storage area
- Reduce potential OH&S risks by the ability to move modules to various levels as required
- Fully customise the area to suit your needs

## **High density basket storage systems are ideal for:**

- Any hospital department or healthcare facility
- Theatre, CSSD, wards, store rooms
- Day surgery
- Anaesthetics store rooms
- Medication store rooms
- Suture trolleys or carts
- ICU/ HDU/ Emergency departments
- Pharmaceutical manufacturer or pharmacy department






## PEGASUS HIGH DENSITY STORAGE RANGE



Echidna racks

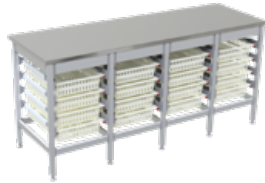

Salus underbench racks



Cabinets



Underbench cabinets



Apollo carts



Echidna carts



Polycarts




Salus carts

## HOW THE SYSTEM WORKS



The entire Pegasus high density modular storage system is based around the uniquely designed **side rails** or **panels** and **interchangeable modules** (baskets, trays and shelves).

The units are designed in either **U (400mm wide)** or **E (600mm wide)** configurations and **additional 'bays' can be added** to suit the storage area.

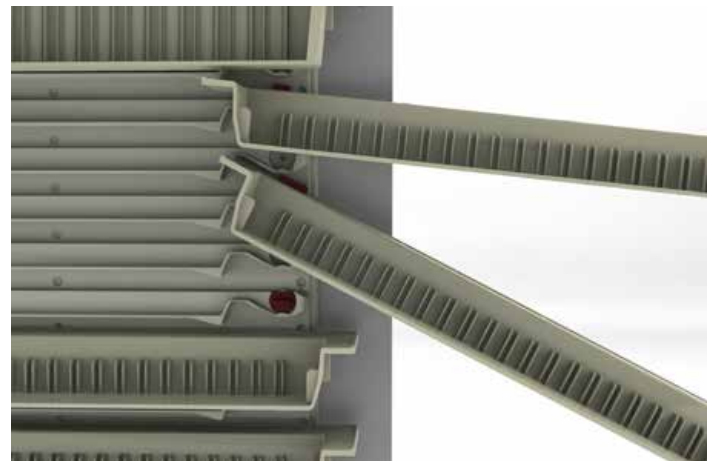

The **Tilt side panels** are installed on the wall of the cabinet or Apollo cart and allows the modules to be placed at various levels.

The Tilt side panels allow 9 horizontal insertions and either gently or steeply (116°) tilts when pulled out, depending on the position of the stop clip.

# Modules for Pegasus range

## MODULES (BASKETS, TRAYS, SHELVES)

All modules are designed to fit in either an U or E style unit



**B104060**  
Basket - 60x40x10cm



**B204060**  
Basket - 60x40x20cm



**T054060**  
Tray - 60x40x5cm



**T104060**  
Tray - 60x40x10cm



**T204060**  
Tray - 60x40x20cm



**L4060**  
Lid for tray & basket



**T053040**  
Tray half size - 30x40x5cm



**T103040**  
Tray half size - 30x40x10cm



**T203040**  
Tray half size - 30x40x20cm



**B103040**  
Basket half size - 30x40x10cm




**W-B104060**  
Basket chrome wire  
60x40x10cm



**W-B204060**  
Basket chrome wire  
60x40x20cm




**WS-INSTR**  
Instrument shelf chrome wire  
60x40cm  
(also available in stainless steel)

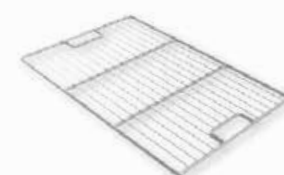

Flat shelf 60x40cm  
SS - SSS-6040WH  
CW - WS-NT-4060-CR



**WS-B104060-SS-WH**  
Basket stainless steel wire  
60x40x10cm



**WS-B204060-SS**  
Basket stainless steel wire  
60x40x20cm



**CATHH-E/U + CATH-SHELF-E/U**  
Retractable catheter hooks  
with shelf - E or U  
E = 6 hooks  
U = 9 hooks



**CATHBX-E/U**  
Retractable catheter box  
E or U






**T104060-ND-HR**  
Tray sterile high resistance -  
60x40x10cm



**T204060-HR**  
Tray sterile high resistance -  
60x40x20cm

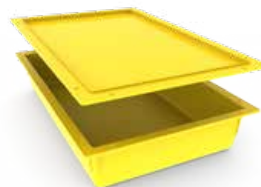

**L4060-HR**  
Lid for sterile high  
resistance tray



**SS-U-CON-SHELF**  
Container shelf solid  
stainless steel



**T104060-AM**  
Tray antimicrobial grey -  
60x40x10cm  
(previously green)



**T204060-AM**  
Tray antimicrobial grey -  
60x40x20cm  
(previously green)



**SHLF-MEL**  
Melamine shelf - 60x40cm



**SHELF-HPL**  
High pressure laminated (HPL)  
shelf - 60x40cm

## MODULE DISPLAY

Modules are inserted into **plastic side rails** (racks, carts); **telescopic slides** (for heavy loads); or **Tilt side panels** affixed to the wall of cabinets or Apollo carts.

**Plastic side rails** allow modules to be placed at **horizontal** or **angled** positions.

These rails can be moved at various heights, without tools, and baskets can be viewed on an angle without falling out.

## UNIQUE SAFETY BASKET STOP




The modules are a retractable system which have a unique safety-stop function, preventing the module from accidentally falling out when pulled or viewed on an angle.



# Echidna racks

## SEALED STRUCTURE

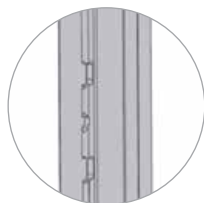

The Echidna rack is a completely sealed system, there are no open holes within the frames, therefore, all surfaces can easily be cleaned

## LABELLING SYSTEM



Labels can be clicked into the frame and remain in position, even if the tray or basket is removed. Labels can include covers to protect any printed labels



## MATERIALS

The entire system is made of aluminium



## 100% MODULAR

This completely modular system provides tool free, easy, reconfiguration of basket and shelf levels, both for standard side rails and heavyweight telescopic slides.

Simply click off and on



## CUSTOMISE

Racks can have multiple 'add-on' bays for a wider unit

## INSTANT ASSEMBLY

Easily install and modify as required to suit different storage parameters

## PERFECT FOR CSSDs

Horizontal rails with wire shelves and baskets are ideal for holding sterile instrument trays and packs.

Reduce OH&S issues with personnel and protect sterile packs

See PAGE 42 for more information about how this works with the NoTouch™ system



## OPTIONS FOR MODULE DISPLAY

### ANGLED RAILS

Baskets can be stored on an angle to assist in viewing items and accessing higher levels

### HORIZONTAL RAILS

Baskets can be pulled and viewed on a tilt without falling

### TELESCOPIC SLIDES

Echidna racks can be equipped with telescopic slides (for loads over 10kg)



### CATHETER RACKS/HOOKS

To securely and safely store catheters



### CUSTOM DESIGNED

Echidna racks are custom designed and built to your requirements.

Multiple add-on bays, modules, shelves, castors and accessories are included to suit the storage area

### SPACE SAVING = INCREASED STORAGE

Baskets are fully retractable - no gaps needed between the baskets, no space is wasted

### IMPROVED ORGANISATION

Clear line of sight + easy and ergonomic access to all baskets at the higher levels

# Echidna carts

The Echidna cart is lighter than most steel carts, flexible and easily manoeuvrable. It is built with an aluminium structure, HPL top working surface and dual push handles

## Features:

- Aluminium frame and castors
- Lightweight and versatile
- Single or double carts
- Sealed structure: no growth of bacteria inside the profiles
- 99cm wide stable top working surface
- Easy to clean

## Can be used in various hospital departments:

- Hospital theatre
- CSSD
- Set up trolley
- Store rooms
- Emergency Departments
- Wards
- Day Surgeries
- Clinics



HYG-CRT98-UU  
Echidna cart double U  
690x990x1060mm



HYG-CRT98-E  
Echidna cart single E  
490x740x1060mm

Echidna carts are ideal for transporting consumables and tray sets around hospital departments including between theatre and CSSD



# Ecoline carts

All sizes are DxWxH

## ECOLINE NARROW CARTS & DOUBLE CART

Ecoline carts incorporate the Pegasus module system and enable modules to be removed from drawers, allowing for easier re-stocking, re-placement, cleaning (washable) as well as integration with other Pegasus systems.

Narrow carts are ideal for recovery, bedside, day surgery and as cannula trolleys, whilst the double carts can be used as treatment carts, dental carts and set up trolleys for oral, maxillofacial and dental procedures or other procedures that require small components and pieces.

### Features:

- Smooth & easy-to-clean surfaces
- Supplied with a key lock as standard
- Powder coated steel
- ABS drawers, wall bumpers and top surface
- Retractable, soft close drawers
- High quality, smooth running extended wheels to ensure the cart's stability even when drawers are pulled out



See PAGE 32 for  
Ecoline cart accessories



CRT-NM43KL-444448  
560x470x1120mm

CRT-NM39KL-44448  
560x470x995mm

CRT-NM35KL-4448  
560x470x900mm



CRT-MUU39-44448  
750x1030x1040mm

# Polycart

## ENVIRONMENTALLY FRIENDLY

Made from 100% polymer which can be recycled

## ANTIMICROBIAL

100% antimicrobial is perfect for hospital environments

## WASHABLE

Polymers can be easily cleaned and washed without the risk of rust and corrosion

## PROTECTION

360° wrap around bumper protects cart and walls

## LIGHTWEIGHT & RIGID

Great rigidity even with its lightweight design

## PUSH HANDLE


Easily manoeuvre cart with integrated handle

## COLOUR OPTIONS

Cart sides and back available in solid colours (red, blue) or handle colours only

## MODULAR

Can be built with various drawer combinations in 5cm, 10cm and 20cm heights

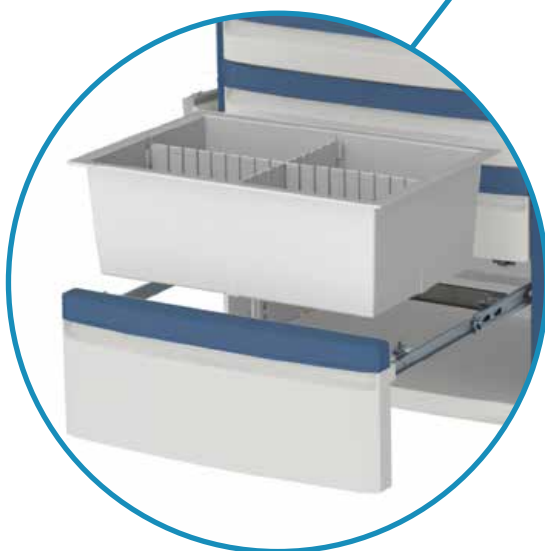



## POLYCART OPTIONS



PLY36-4449-WW  
580x840x920mm



PLY41-44449-WW  
580x840x1040mm



PLY46-444449-WW  
580x840x1170mm



PLY36-4449-BB  
580x840x920mm



PLY41-44449-BB  
580x840x1040mm



PLY46-444449-BB  
580x840x1170mm



PLY36-4449-RR  
580x840x920mm



PLY41-44449-RR  
580x840x1040mm



PLY46-444449-RR  
580x840x1170mm

## Handle colours

All Polycarts are available with different coloured handles



Polycarts can be customised  
with multiple accessories.  
See PAGE 32 for the range



# Apollo storage carts

## HEIGHT OPTIONS

Cart heights available:  
1090mm, 1470mm, 1840mm

## DIFFERENT WIDTHS

Available in single, double or  
triple cart widths in E (600mm wide)  
or U (400mm wide) styles

## DOOR STYLES

Different doors  
available:  
open/no door,  
tambour,  
glass, solid

## PROTECTION

Full 360°  
wrap-around  
bumper



E type

## HYGIENIC

- All surfaces are made of polymers, resistant to moisture
- ABS top cover, PP floor, PVC exterior walls



U type

## SAFETY

Castors are extended  
to provide increased stability

## STREAMLINED MOVEMENT

Smooth-running medical grade,  
non-marking rubber castors  
(2 x swivel, 2 brake - front)

See PAGE 32 for  
Apollo cart accessories



## OPEN (NO DOOR) CARTS



APL-4.0UUU-ND  
Triple U



APL-4.0E-ND  
Single E



APL-4.0U-ND  
Single U



APL-2.0UU-ND  
Double U

Code	Width	Depth	Height
APL-2.0E-ND	750mm	530mm	1090mm
APL-2.0EE-ND	1460mm		
APL-2.0U-ND	550mm	730mm	
APL-2.0UU-ND	1060mm		
APL-3.0E-ND	750mm	530mm	1470mm
APL-3.0EE-ND	1460mm		
APL-3.0U-ND	550mm	730mm	
APL-3.0UU-ND	1060mm		
APL-4.0E-ND	750mm	530mm	1840mm
APL-4.0EE-ND	1460mm		
APL-4.0U-ND	550mm	730mm	
APL-4.0UU-ND	1060mm		
APL-4.0UUU-ND	1570mm		

## TAMBOUR, ROLLING DOOR CARTS



APL-4.0E-TD  
Single E



APL-4.0UU-TD  
Double U style



APL-3.0UU-TD  
Double U



APL-2.0E-TD  
Single E

Code	Width	Depth	Height
APL-2.0E-TD	750mm	530mm	1090mm
APL-2.0EE-TD	1460mm		
APL-2.0U-TD	550mm	730mm	
APL-2.0UU-TD	1060mm		
APL-3.0E-TD	750mm	530mm	1470mm
APL-3.0EE-TD	1460mm		
APL-3.0U-TD	550mm	730mm	
APL-3.0UU-TD	1060mm		
APL-4.0E-TD	750mm	530mm	1840mm
APL-4.0EE-TD	1460mm		
APL-4.0U-TD	550mm	730mm	
APL-4.0UU-TD	1060mm		
APL-4.0UUU-TD	1570mm		

## GLASS DOOR CARTS



APL-4.0EE-GD  
Double E



APL-4.0U-GD  
Single U



APL-2.0E-GD  
Single E



APL-3.0UU-GD  
Double U

Code	Width	Depth	Height
APL-2.0E-GD	750mm	530mm	1090mm
APL-2.0EE-GD	1460mm		
APL-2.0U-GD	550mm	730mm	
APL-2.0UU-GD	1060mm		
APL-3.0E-GD	750mm	530mm	1470mm
APL-3.0EE-GD	1460mm		
APL-3.0U-GD	550mm	730mm	
APL-3.0UU-GD	1060mm		
APL-4.0E-GD	750mm	530mm	1840mm
APL-4.0EE-GD	1460mm		
APL-4.0U-GD	550mm	730mm	
APL-4.0UU-GD	1060mm		
APL-4.0UUU-GD	1570mm		

See PAGE 32 for  
Apollo cart accessories

## SOLID, HINGED DOOR CARTS



APL-2.0UU-SD  
Double U



APL-4.0EE-SD  
Double E



APL-4.0UU-SD  
Double U



APL-4.0E-SD  
Single E

Code	Width	Depth	Height
APL-2.0E-SD	750mm	530mm	1090mm
APL-2.0EE-SD	1460mm		
APL-2.0U-SD	550mm	730mm	
APL-2.0UU-SD	1060mm		
APL-3.0E-SD	750mm	530mm	1470mm
APL-3.0EE-SD	1460mm		
APL-3.0U-SD	550mm	730mm	
APL-3.0UU-SD	1060mm		
APL-4.0E-SD	750mm	530mm	1840mm
APL-4.0EE-SD	1460mm		
APL-4.0U-SD	550mm	730mm	
APL-4.0UU-SD	1060mm		
APL-4.0UUU-SD	1570mm		



## CATHETER CARTS



Double U with  
catheter box & hooks



Triple U with  
catheter hooks



## SPECIALTY CARTS



CSSD transport cart  
Single U with  
high resistance yellow trays  
(trays are sterilisable)



Dirty utility cart  
Double U with  
antimicrobial trays  
(now grey - not green)


**Apollo carts are ideal for  
storing high value catheters,  
balloons and stents in  
catheter labs and medical  
imaging departments**

## MAXIMUM CAPACITY OF MODULES IN CART

Module height	Door type	1090mm	1470mm	1840mm
20cm	TD	2	3	4
	GD/SD/ND	3	4	5
10cm	TD	4	8	11
	GD/SD/ND	5	9	12
5cm	TD	8	16	22
	GD/SD/ND	10	18	24

TD - Tambour Door  
GD - Glass Door

SD - Solid Door  
ND - No Door/open

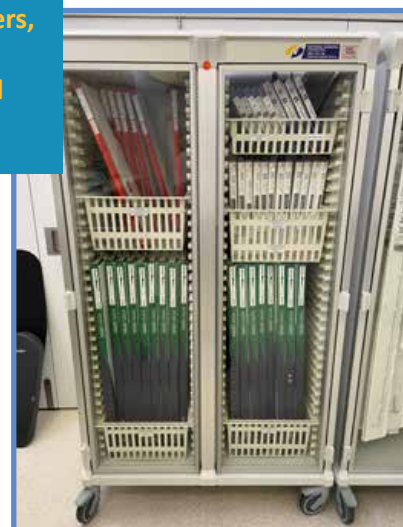

## BROCHURE



Ask us for the  
Apollo cart brochure  
for detailed  
information on  
the range

# Accessories for carts



**CARTA-IVPOLE-HA**  
Ecoline IV pole adjustable  
(mounts to rear of cart)



**PLY-IVPOLE/ PLY-IV-HLD**  
Polycart IV pole adjustable  
(mounts to rear of cart).  
IV pole adaptor used when other  
accessories installed on rear



**Polycart: PLY-KEYLCK**  
Ecoline: **CARTA-BRO-LOCK**  
Breakaway/seal lock



**Polycart: PLY-CODELOCK**  
Ecoline: **CARTA-MK39/43ELKIT**  
Electronic combination  
code lock




**CARTA-SFRAME-FL**  
Foldable side frame with  
basket (B103040) - Ecoline



**CARTA-SFRAME-FL**  
Ecoline foldable side frame  
with shelf (SHELF-HPL3040)



**GLOVEH/CARTA-GLVBX**  
Glove holder wire  
single compartment

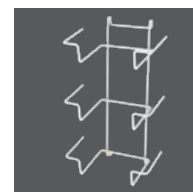

**CARTA-GLOVBX-3**  
Glove holder wire  
3 compartment



**PLY-CARBACKB**  
Cardiac back board  
(mounts to rear of cart)  
*\* Polycart order in advance*



**PLY-SDIFARM**  
Defibrillator arm, swivelling



**SBASKET**  
Multi storage wire basket



**CARTA-CATH-HLD**  
Side catheter box with  
flexiglass front panel  
Lid - **CARTA-CATH-LID**



**S-GBH-ABS**  
Glove box holder single  
(requires mounting hook  
DIN-HKS-GBH-SET)



**TR-GBH-ABS**  
Glove box holder triple  
(requires mounting hook  
DIN-HKS-GBH-SET)



**DLBH-PP**  
Holder for disinfection bottles  
(requires mounting hook  
DIN-HKS-GBH-SET)

bottle  
not included



**HAZ-BIB-H**  
Holder for hazard bins  
(requires 2 accessory rails)



**CARTA-ALPH-U/E**  
Apollo cart push handle  
horizontal



**CARTA-ALPH-MK39/43**  
Push handle aluminium for  
Ecoline cart



**GZ1660**  
Oxygen tank holder




**OXBH-KIT**  
Oxygen tank holder  
adjustable




● 1 accessory rail required

● 2 accessory rails required

● Pole kit required

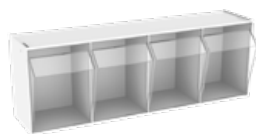

**TILTBIN-4**  
Tilt-Bin cassette 4 sections  
(requires tilt bin holder)

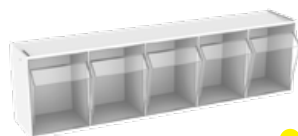

**TILTBIN-5**  
Tilt-Bin cassette 5 sections  
(requires tilt bin holder)



**TILTBIN-6**  
Tilt-Bin cassette 6 sections  
(requires tilt bin holder)



**Polycart: PLY-TBL-2**  
**Ecoline: CRTA-TRL-2**  
Tilt-Bin holder/posts for  
2 rows of tilt bins



**Polycart: PLY-TBL-3**  
**Ecoline: CRTA-TRL-3**  
Tilt-Bin holder/posts for  
3 rows of tilt bins



**WSB-CRT**  
Waste container with lid



**PLY-LTH**  
Laptop arm holder  
(Polycart)



**PLY-VESA**  
VESA arm holder  
(Polycart)



**PLY-HSHLF**  
Front shelf (Polycart)



**PLY-SSHFLF-R/L**  
Stainless steel shelf heavy load  
push to open (Polycart)  
*\* Fitted at factory*




**PLY-KBTR-VF**  
Keyboard tray  
push to open (Polycart)  
*\* Fitted at factory*



**PLY-AIO**  
All in one arm (Polycart)




**PLY-FRAIL**  
Rear rails Polycart  
*Can be used for mounting  
items for easy reach*

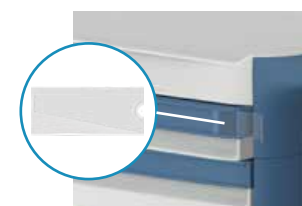

**PLY-DWR-LBCOV**  
Label cover (Pack 60)  
*slides into Polycart handle*



**PLY-A4PRF-LB**  
Perforated sheet of labels  
*printable, slide into Polycart  
label holder*

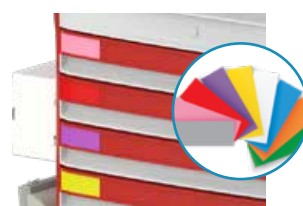

**PLY-BRSLW-SET**  
Polycart Broeslow/paediatric  
emergency coloured label set

## SOME ACCESSORIES REQUIRE ACCESSORY RAILS (1 OR 2) OR POLE SET




**PLY-SRAIL**  
Polycart accessory rail



**APL-SRAIL-E/U**  
Apollo cart accessory rail



**CRTA-SRAIL-MK39/43**  
Ecoline accessory rail

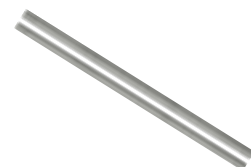

**PLY-TBL-2**  
Polycart pole kit rear

*Codes may slightly vary depending on if the accessory is used with Apollo cart, Ecoline cart or Polycart*

# Salus aluminium transport carts

## STABILITY

Stable construction with top and bottom support

## LIGHTWEIGHT

- Frame is made of high-quality, lightweight anodised aluminium
- Rails made from nylon and aluminium

## VERSATILE

Plastic rails can be re-positioned without tools. Use with ABS baskets (10cm, 20cm), ABS trays (5cm, 10cm, 20cm), wire instrument trays, flat wire shelves

## CLEANABLE

Easily clean and disinfect, no rusting. No future peeling paint

## OPEN TOP

Salus carts feature an open top to ensure dust doesn't collect

## EASE OF MANOEUVRABILITY

Push handles allow easy movement around departments

## OPTIONS

Various configurations: single or double cart in U or E styles in different heights





## SINGLE BAY CARTS



SLS-U-1160  
690x570x1130mm



SLS-U-1400  
690x570x1370mm



SLS-U-1640  
690x570x1640mm



SLS-U-1880  
690x570x1880mm

SLS-E-1160  
490x770x1130mm

SLS-E-1400  
490x770x1370mm

SLS-U-1640  
490x770x1640mm

SLS-E-1880  
490x770x1880mm

## DOUBLE BAY CARTS




SLS-UU-1160  
690x1050x1130mm



SLS-UU-1400  
690x1050x1370mm



SLS-UU-1640  
690x1050x1640mm

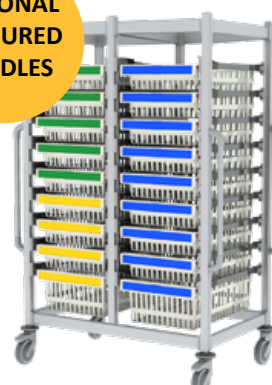

SLS-UU-1880  
690x1050x1880mm

SLS-EE-1160  
490x1450x1130mm

SLS-EE-1400  
490x1450x1370mm

SLS-EE-1640  
490x1450x1640mm

SLS-EE-1880  
490x1450x1880mm

OPTIONAL  
COLOURED  
HANDLES

## UNDERBENCH CARTS



SLS-CART-E-875  
485x670x875mm



SLS-CART-UU-UD-855  
630x990x855mm

Salus carts are ideal for set up trolleys to transport sterile packs and consumables to theatre.  
Use coloured handles to quickly identify different procedures/specialties



# Salus underbench racks

## Fully modular underbench racks and carts

Underbench racks to suit your storage area. Install multiple racks under existing or new benchtops. Combine multiple underbench bays with tall racks to utilise storage area.

Create a clean and dust free environment, racks can be easily accessed underneath for cleaning and benchtops can be disinfected. All Salus underbench racks can be used with any of the Pegasus modules. Maximise storage by installing louvre panels along top of benchtop for chrome wire baskets.



## Salus underbench cart

Salus underbench carts feature the same side rail and support frames as the underbench racks.

The heavy duty castors allow the units to be moved around as required then stored in the Salus underbench rack system or under benches.





## Benchtops

Custom made benchtops can be installed on the underbench frame units



**Laminate**  
25mm



**Laminex**  
*compressed laminate*  
19mm



**Stone**  
20 - 30mm




**Stainless steel**  
30mm

Numerous colours and patterns available in all materials



## Specifications

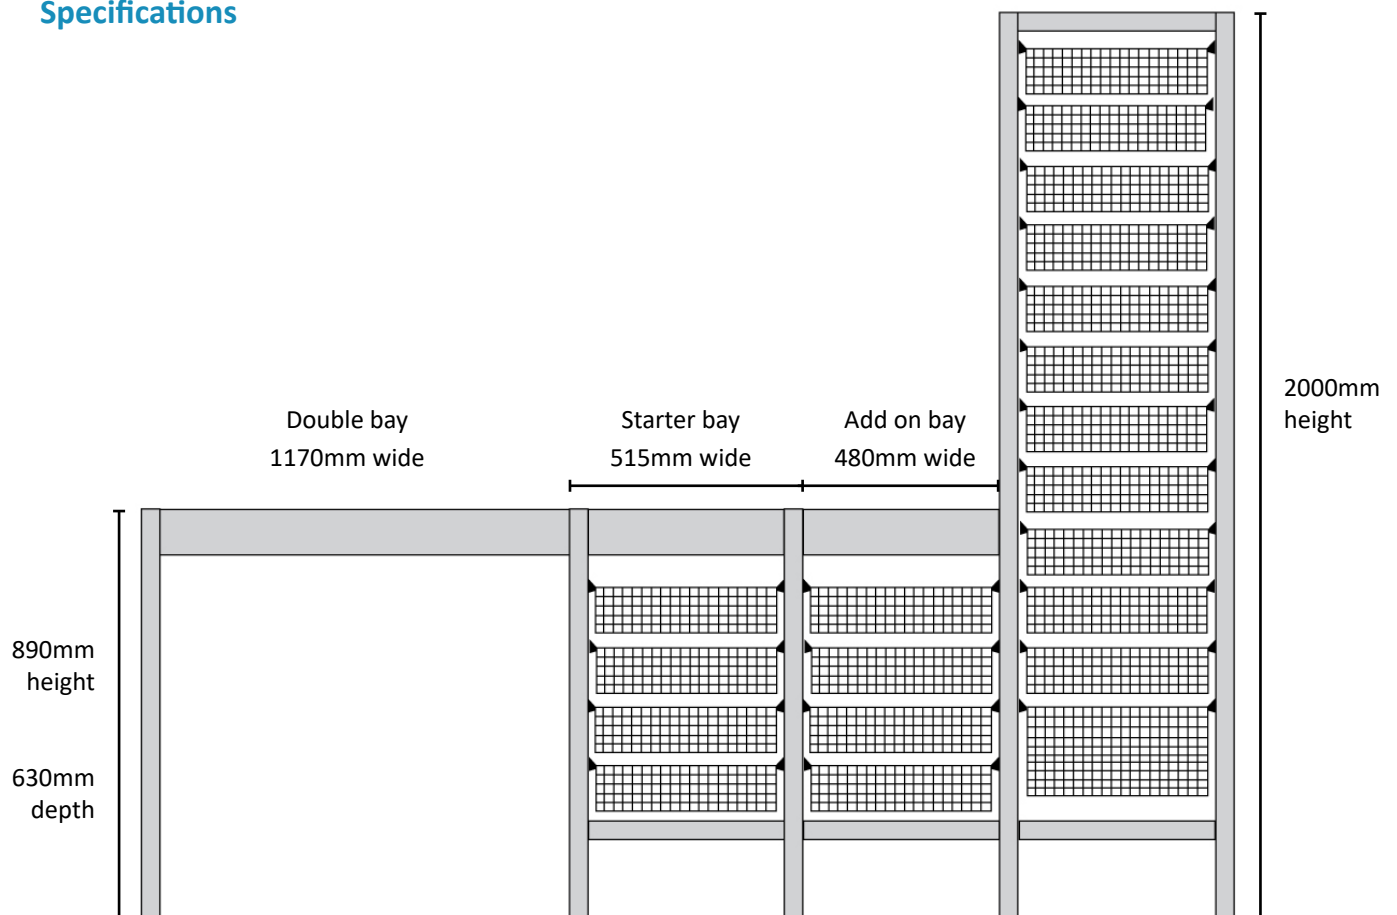

# Cabinets

## CUSTOMISABLE

Customised cabinets to suit storage area including tall/standard, underbench, wall mounted. Any height/ width variations can be manufactured

## HIGH QUALITY

Cabinets are designed & manufactured using high quality hospital grade melamine

## ORGANISATION

Ability to combine the KANBAN stock rotation and ordering system



## VERSATILE DOOR OPTIONS

Available open/no door or with rolling tambour door, hinged solid door or glass door

## COMPLIANCE

Designed to ISO standard, all modules can fit in cabinet



## INCREASE STORAGE CAPACITY

Includes ABS Tilt side panels as standard however, retractable telescopic slides can be incorporated for heavier loads. Using different modules allows more items to be stored compared to standard shelves



## STANDARD/ TALL CABINETS



Standard cupboards can be built up to 2100mm high and any width.

The number of bays is dependent on the width of the storage area and whether U or E configuration is preferred/required

## UNDERBENCH CABINETS



## CABINETS ON CASTORS



### INCREASE STORAGE

The Pegasus underbench cabinets can be made in any height up to 1000mm with various bay add-ons.

Installing wire wall panels above the bench with NSC chrome wire baskets can also increase storage capacity of the area

## WALL MOUNTED CABINETS




### CUSTOM MADE

Cabinets are custom designed to suit the user's requirements. We can work with builders, architects and hospitals to allow cabinets to be designed to meet the ISO standards and enable the Pegasus system to be installed including catheter storage.

# Pegasus accessories



Dividers - short or long  
for all modules

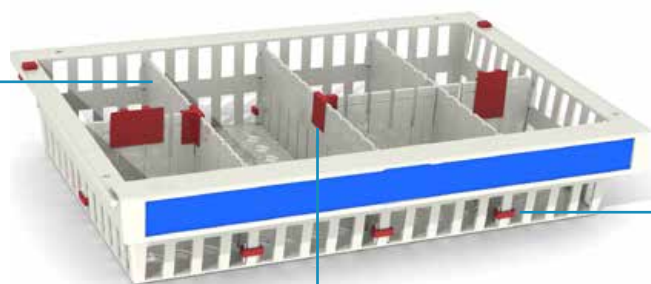

Divider lock to keep  
dividers secure  
DIVLCKS



T-holder for locking  
dividers once snapped  
THLDR

Code	Divider size/module
D0540	Short for 5cm tray 40x5cm
D0560	Long for 5cm tray 60x5cm
D1040	Short for 10cm basket 40x10cm & long for half size basket
D1060	Long for 10cm basket 60x10cm
D2040	Short for 20cm basket 40x20cm
D2060	Long for 20cm basket 60x20cm
D1030	Short for half size basket 30x10cm

Code	Description
THLDR	T-holder for dividers
DIVLCKS	Divider lock
PNWL-SET	Support wheel for tilt side panel



Label holder with coloured or  
white label plate



Label holder - vertical



Label holder - horizontal



EZ SWIPE card (green/red)

Code	Description
LBLHLD-PPCC	Label holder large - 9x5.5cm
LP-PE-W	Label plate white - 8.6x5.4cm
LP-PE-PK	Label plate pink - 8.6x5.4cm
LP-PE-OR	Label plate orange - 8.6x5.4cm
LP-PE-YL	Label plate yellow - 8.6x5.4cm
LP-PE-LGR	Label plate light green - 8.6x5.4cm
LP-PE-DGR	Label plate dark green - 8.6x5.4cm
LP-PE-DBL	Label plate dark blue - 8.6x5.4cm
LP-PE-RD	Label plate red - 8.6x5.4cm

Code	Description
LBLHLD-VER	Label holder vertical - 4x5.7cm
LBL-VERCOV	Label cover for label holder vertical
LBLHLD	Label holder horizontal - 5.7x4cm
LBL-HORZCOV	Label cover for label holder horizontal
LBL-EZSWP	EZSWIPE card with case (use with vertical label holder)
LBL-INTR-HYG	Label holder for Echidna racks (snaps on to rack frame - see Page 22)

## COLOUR CODED HANDLES FOR IMPROVED ORGANISATION

Hospital personnel need to quickly and easily locate supplies for better patient care and efficient operations.

**Studies show that nurses spend at least 5-20% of their time on retrieving supplies.**

Well designed and implemented supply storage and inventory management systems can dramatically decrease time spent by nurses on looking for and retrieving supplies.

Incorporating coloured handles can:

- Improve visibility and recognition of stored items
- Colour coded according to department or item type
- Increase nursing satisfaction as time isn't wasted looking for items
- Be adapted to suit your hospital storage requirements
- Easily replace and clip on any basket/tray

Code	Description
LBL-HDL-U-B	Handle U type
LBL-HDL-U-BP	Blue U coloured strip
LBL-HDL-U-GP	Green U coloured strip
LBL-HDL-U-RP	Red U coloured strip
LBL-HDL-U-YP	Yellow U coloured strip
LBL-HDL-E-B	Handle E type
LBL-HDL-E-BP	Blue E coloured strip
LBL-HDL-E-GP	Green E coloured strip
LBL-HDL-E-RP	Red E coloured strip
LBL-HDL-E-YP	Yellow E coloured strip



Coloured handles can identify different departments or item types




Dividers can create multiple compartments to suit items stored



Label holders easily clip onto any module or divider





# No-Touch™ system

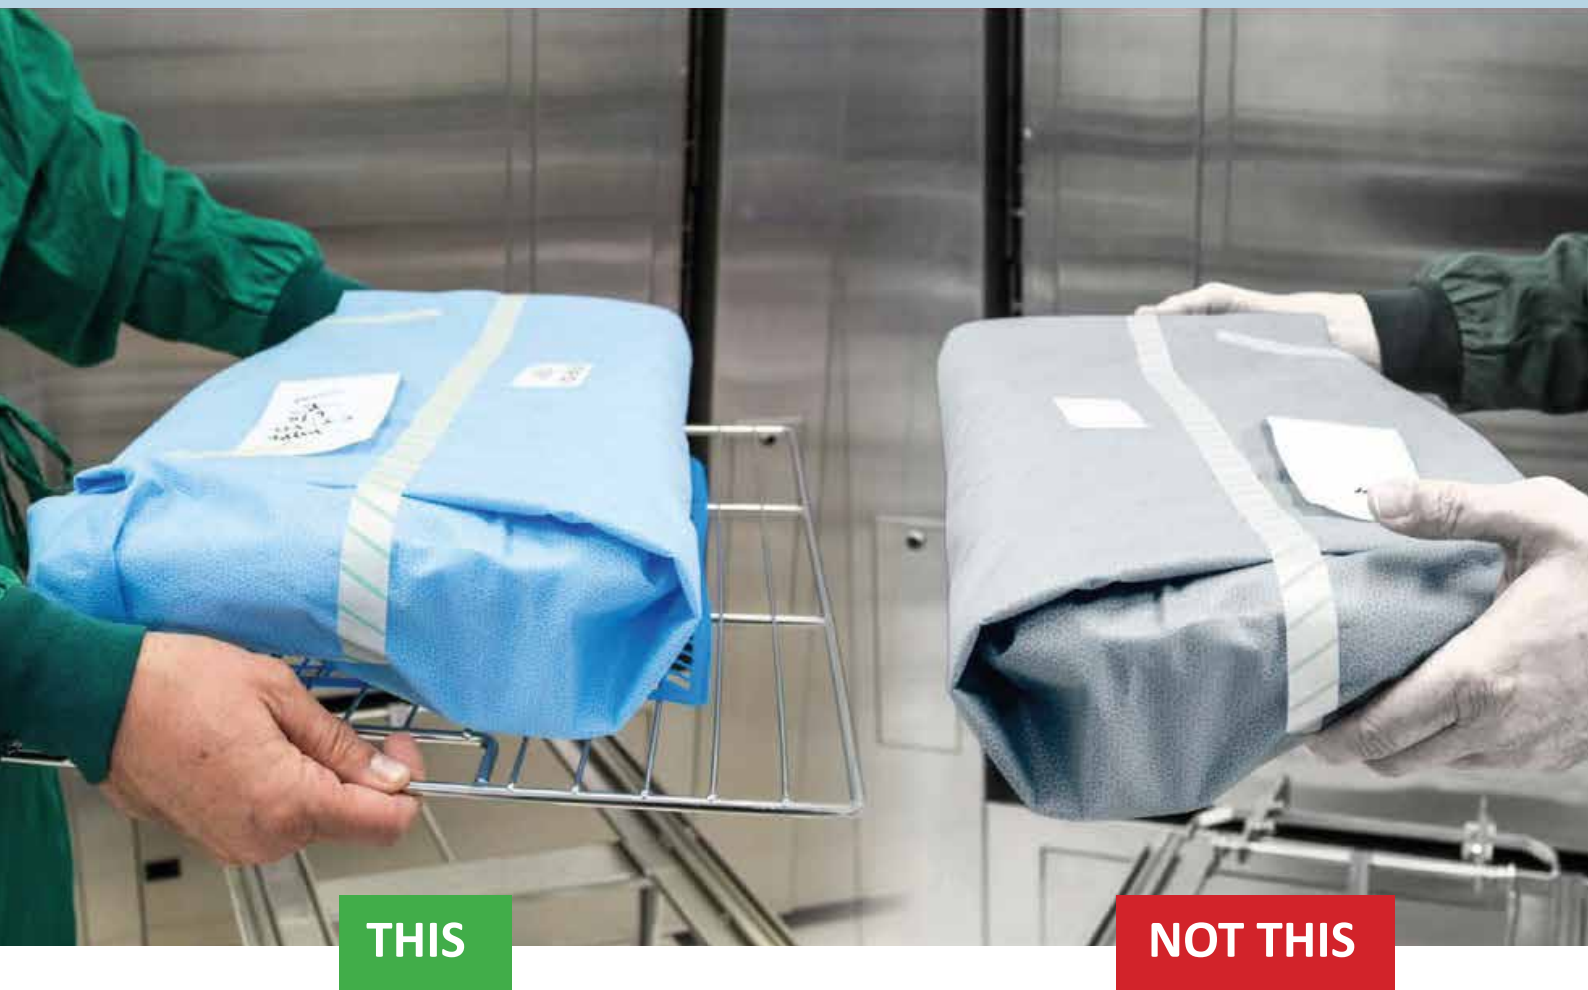

Contamination and tears are a thing of the past with the NoTouch™ system from CSSD to Theatre with virtually no human interference


The No-Touch™ system eliminates human interaction during instrument reprocessing thanks to the dedicated ISO Standard Stainless Steel shelves and baskets and the range of open and closed carts and racks

Eliminate contamination and tears during transportation by touching only the carrier shelf, and not the sterile pack

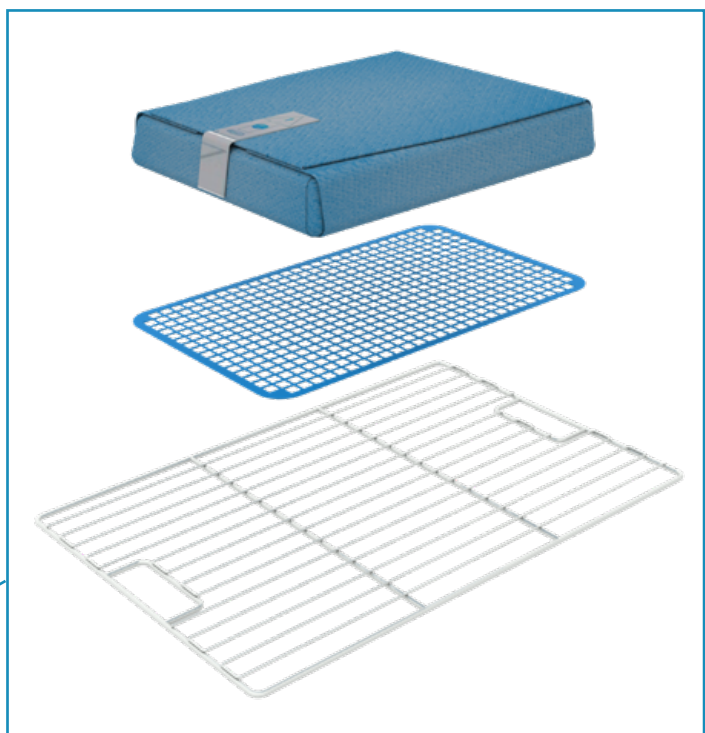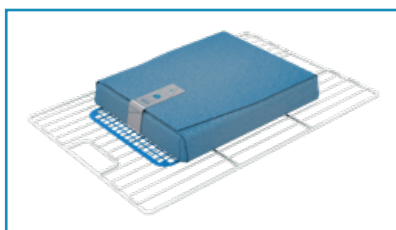



**STEP 1**  
Wrap cleaned  
instrument trays

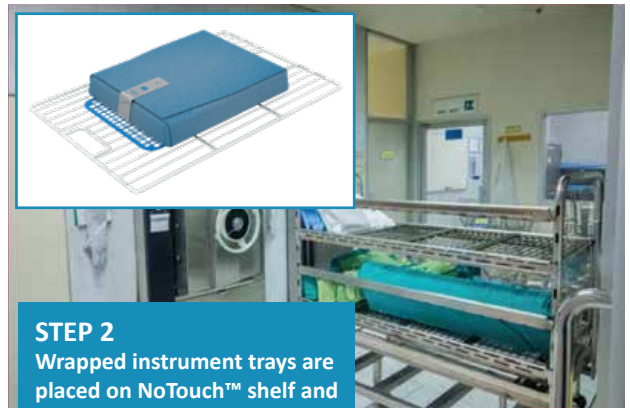

**STEP 2**  
Wrapped instrument trays  
are placed on NoTouch™ shelf  
and into steriliser (shelf is handled,  
pack is not touched)




**STEP 3**  
NoTouch™ shelf (w/sterile pack)  
is transported to sterile storage  
(shelf is handled, pack is not  
touched)



**STEP 4**  
NoTouch™ shelf (w/sterile  
pack) is transported to OT to  
be opened by Nurse

### NoTouch™ system is used with Pegasus racks and carts

Stainless steel flat shelves and baskets can be stored and moved in carts and racks as part of the NoTouch™ process

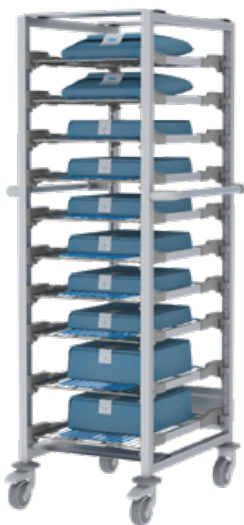

Salus carts



Echidna/open frame racks





# Kanban inventory management

The KANBAN 2-BIN system is a lean supply strategy which saves valuable nursing and material management time while rationalising and rotating inventory



## KANBAN 2-BIN Features

- Baskets are divided in half so that the front half is identical to the back half
- Stock levels are determined to match restocking schedules and are equally split between front and rear basket compartments
- Multiple dividers possibilities - compartments are set to match stock stored
- Can be used with any Pegasus rack, Cabinet, Apollo cart, Polycart, Salus cart
- Combine with colour coded handles to store goods in appropriate categories/departments for better stock identification

## KANBAN 2-BIN Options


Label holders with coloured cards



Label holders with cover - vertical or horizontal




EZ-Swipe cards  
(use with vertical label holder)

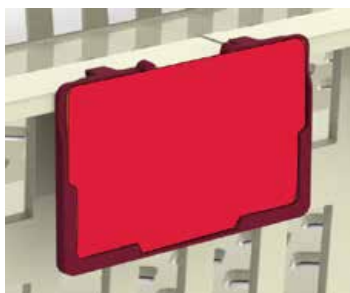



## KANBAN 2-BIN Workflow

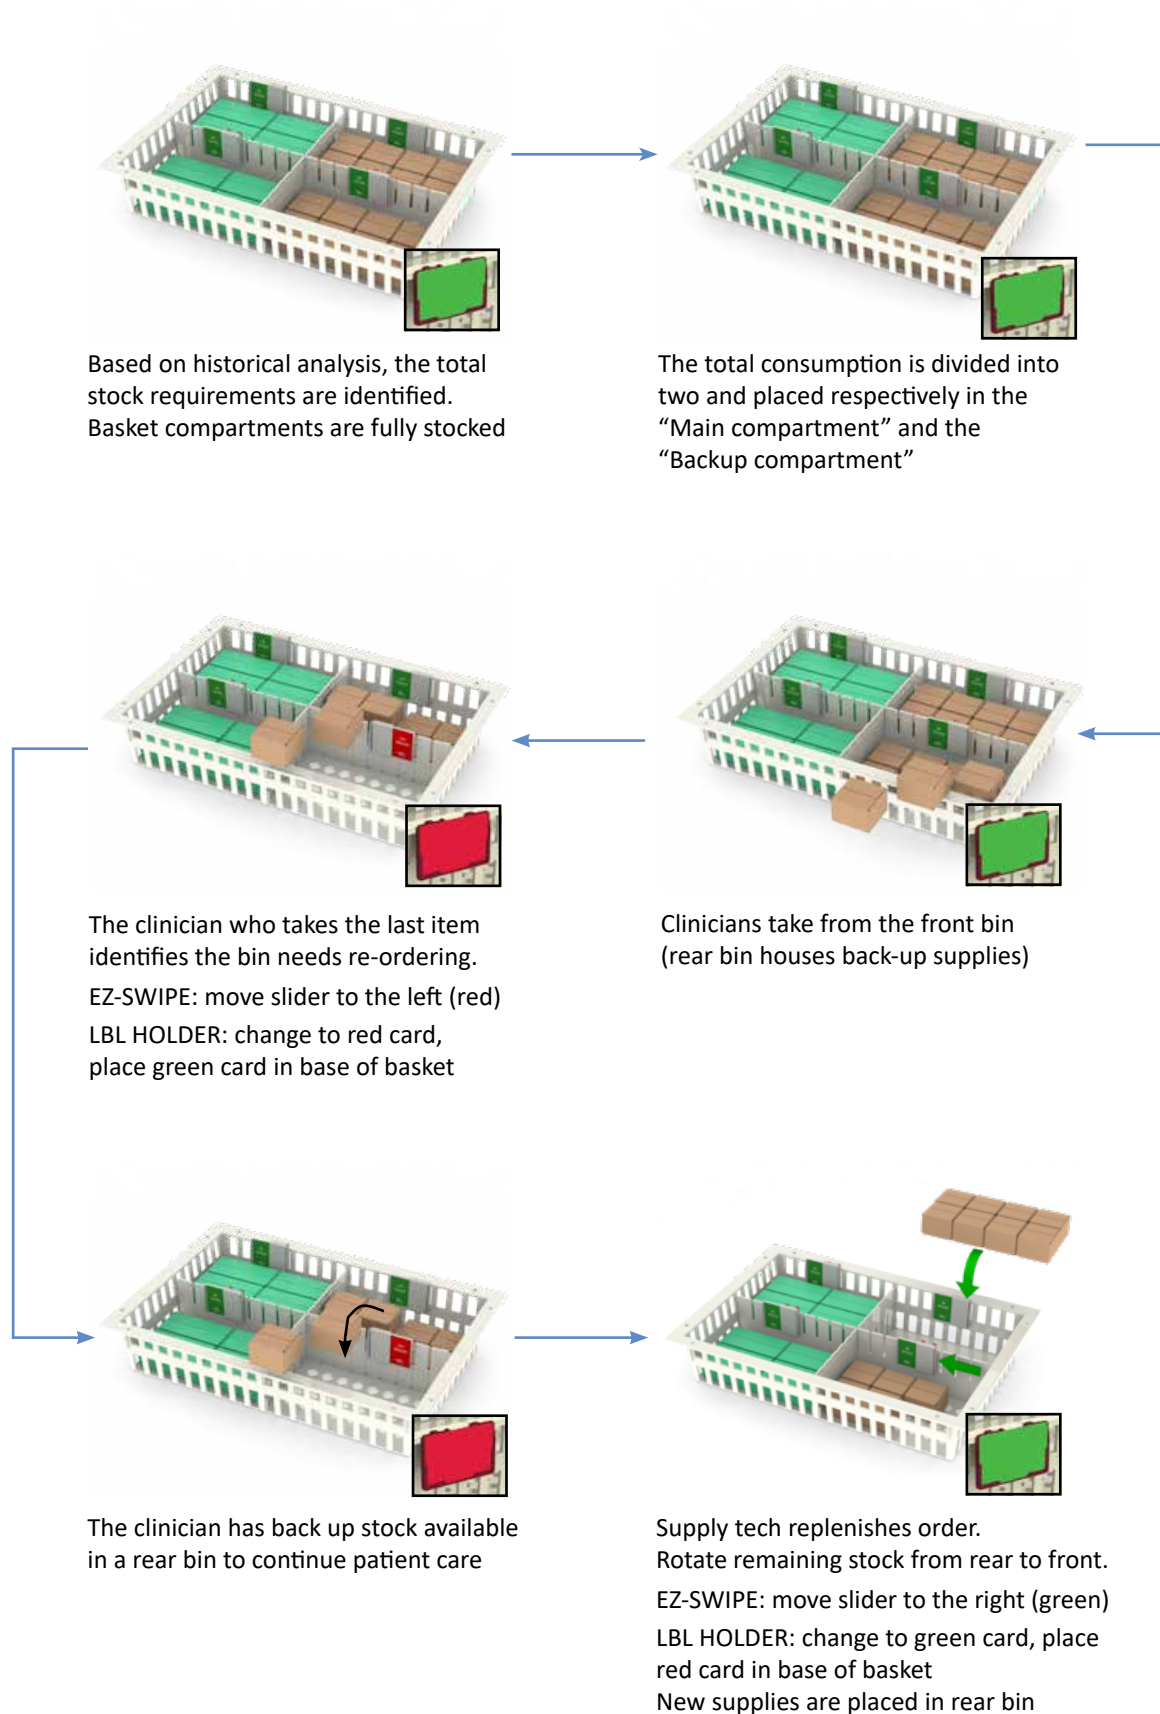

# Catheter storage

**Providing secure and durable storage of high value and various sized catheters, stents, balloons and consumables essential for catheter labs, medical imaging and radiology clinics**

NSC has a range of storage solutions ideal for catheter laboratories and medical imaging departments.

These systems include incorporating retractable catheter hooks or catheter boxes with:

- Racks
- Apollo carts
- Catheter cabinets

Specialised catheter storage items:

- Catheter trolleys
- Chrome wire catheter baskets - *see Page 11*

All of these storage systems can be incorporated into an overall solution specific to meet your catheter laboratory storage requirements.

## CATHETER HOOKS

The retractable catheter holders are perfect for storing multiple high value catheters and stents in a secure and organised method. Each holder features 9 hooks (U type) or 6 hooks (E type).

The recommendation is for up to 5 x catheter holders on an E type, which provides 30 hooks; and up to 3 catheter holders on a U type, which provides 27 hooks per bay. The hooks can hold multiple catheters on each hook.

The unique retractable extension allows the catheters to be pulled out for viewing and easy access. This also allows for catheters to be re-stocked when low. Label holders can be mounted to the end of the catheter holder or on each catheter hook.



**The Pegasus catheter retractable hooks have been made uniquely for storing & accessing valuable catheters and stents**







# Flowsell pharmacy storage



**Pull-out pharmacy slip shelves can be fitted on a standalone gondola (multiple bays) or within a cabinet on wall stripping**

- Easily dispense medications and pharmaceuticals
- Divider system allows medications to be separated and rotated
- Unique slip shelves have ribbed bottom to reduce dust collection in base
- Extendable shelves for easy access
- Modular system - multiple bays can be installed side-by-side and back-to-back
- Different heights - full height gondolas or underbench units
- Wall stripping can be installed in new or existing cabinets
- Superior infection & hygiene control, easy to clean

**Flowsell™**



## **Pullout slip shelves**

Each slip shelf includes:

- Open base with ribbed slip mat to allow dust to pass through
- Clear shelf front 50mm high
- 8 FastFit dividers - easy to mount and alter to suit stored items
- Ticket stripping label holder
- Self locking - bracket lock
- High quality drawer runners
- Push-pad opening

*\* patent & design registration by Flowsell*




## DIMENSIONS

### GONDOLA

Height (mm)	1350		
	1550		
	2260		
Depth (mm)	<i>When used with shelf:</i>	Wall unit	Double sided unit
	305	407	740
	405	507	940
	505	607	1140
Width (mm)	# Bays	600mm wide shelf	910mm wide shelf
	1	645	960
	2	1247	1876
	3	1849	2792
	4	2451	3708

### SLIP SHELF

Width (mm)	600
	910
Depth (mm)	305
	405
	505

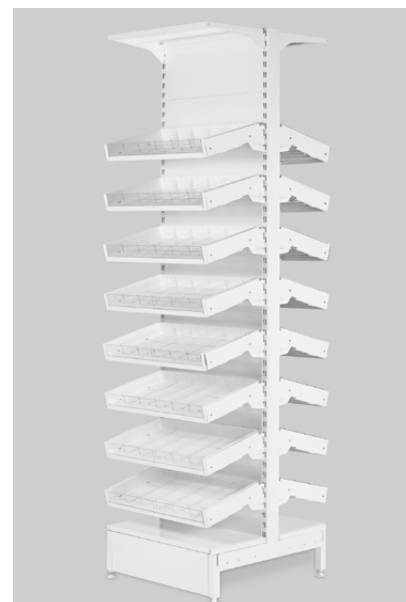



# Height adjustable tables

NSC height adjustable CSSD packing tables are manufactured with 304 stainless steel to ensure a high quality and durable finish. They are custom designed and manufactured to suit the individual requirements of the CSSD and its personnel.

- Australian made
- Available in various sizes up to 2.3 metres
- Standard with heavy duty castors and electric Linak lifting legs
- Linak lifting equipment allows the user to raise or lower table to height required (750mm - 1400mm)
- Customise using a variety of options and accessories



Multiple tables can be installed side-by-side or back-to-back





## ACCESSORIES FOR HEIGHT ADJUSTABLE TABLES



MEK DAYA25130  
Daylight Omega 7 magnifier glass LED



C DS112D  
Monitor arm holder



C PAPER ROLL HOLDER  
Rear roll holder



Rear wire shelves.  
Single or double




Underbench wire shelf  
Single or double



C KEYBOARD DRAWER  
Keyboard holder retractable



C LED LIGHT  
LED light strip (under shelf)

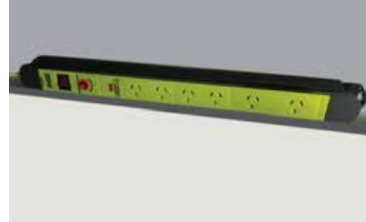

C POWERBOARD  
Powerboard  
mounted under rear as standard,  
can be mounted in any position  
under table



Roll holder & cutter  
various options



C ROLLER  
Conveyor roller - 600mm wide with  
mount - side or front



Keyboard flat medical  
various options



Heat sealers  
various options

# Specialised units

## MOBILE WRAP RACKS

NSC mobile wrap racks are designed to securely hold and store kimguard and other sterilisation wraps.

Standard design includes chrome wire shelf, 4 horizontal wrap bars with anti-slip O-rings to prevent wrap sliding off and 125mm castors (2 brake, 2 swivel) for streamlined movement. Lower chrome wire shelf ensures that sterile wrap won't fall on floor and be potentially contaminated

Sizes: 610x1520x1540mm, 610x1220x1540mm, 530x1520x1540mm, 530x1220x1540mm



## CRUTCH RACKS

Crutch racks are manufactured in two styles depending on the type of crutches being stored (under arm or forearm).

Manufactured in various sizes utilising our chrome wire shelves and specially made stainless steel mounts.

Grids are used to store crutches so that they are upright and organised if wrapped in plastic.

Grids are available in 460x760mm, 610x910mm, 460x1070mm



## OXYGEN CYLINDER TROLLEY

Designed by NSC specially for Australian oxygen tanks/cylinders

- Securely store and manoeuvre 15 cylinders
- Installed with heavy duty 125mm castors (2 brake, 2 swivel)
- Combination of heavy duty chrome wire and stainless steel
- Handle to easily control and move the trolley
- Size: 460x760x1050mm



These trolleys have been designed specially for Australian sized oxygen tanks

## PROBE & SCOPE TRANSPORT TROLLEY

Safely and securely transport clean and dirty endoscopes and probes to and from OT to CSSD in combination with the NSC scope transport trays.

Trolley made in high quality chrome wire with heavy duty castors and side ledges ensures transport trays won't slide out.

Use with scope transport trays -

SH41235 Probe transport tray 36x43x7.5cm

SH43609 Nautilus-Multi transport tray with cover 70x49x9cm



### C TRANS-TROLLEY

Transport tray storage trolley chrome wire -  
610x910x1150mm  
4 shelves on heavy duty castors with  
ledges on 3 sides



# Specialised units

## LOUVRE PANEL TROLLEY

- Ideal for storing small items and consumables
- Double sided
- Powdercoated finish
- Linking capabilities for joining multiple units
- Handles on both sides
- Steel base shelf

Use with NSC chrome wire baskets - see Page 10



Code: C LOUVRE BASKET TROL.  
675x460x1200mm



Code: C LOUVRE BASKET TROL2  
675x920x1200mm  
(2 trolleys joined)




Code: C LOU-TR7260  
600x980x1540mm

## PPE STATION

Different compartments to store essential PPE items - disposable gowns, aprons, face masks, gloves, disinfection bottles, eye wear and other items

- Manufactured with high quality stainless steel wire
- Unique soft edged design, removes harsh edges
- Can be mounted to wall using the 4 wall mounts
- Front edge ensures items do not fall from the station

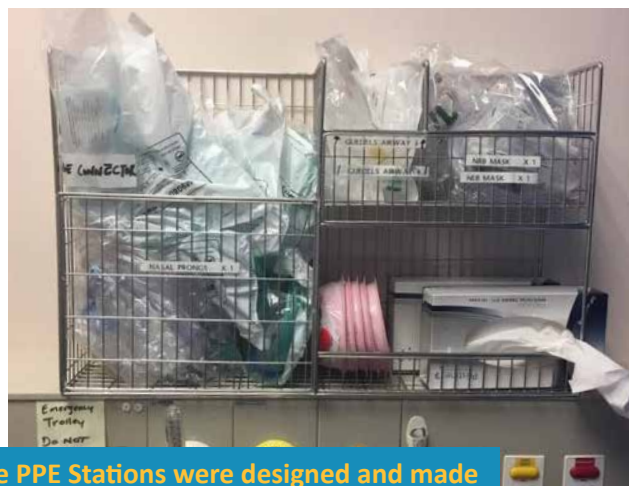

The PPE Stations were designed and made in conjunction with an Australian hospital

Code: C PPE-STATION

## MATTRESS STORAGE



Mattress storage racks and carts can securely store mattresses when not in use or when being transported to other areas.

Up to 3 mattresses can be installed within each bay.

Multiple bays and units are designed next to each other to maximise space.

SLS-CART-M-620

Mattress cart 620x2070x1520mm

Each bay of the mattress storage rack: 550x950x2450mm

## SUTURE STORAGE

**The organisation of sutures is vital in theatres and store rooms. With the many variations of sutures stored, it is important that they are separated and easily accessible for personnel.**

NSC have a range of suture storage options utilising either angled chrome wire shelves, flat chrome wire shelves, Pegasus racks and carts. Angled modules and shelves are ideal for suture storage which allows for quick recognition.

Features:

- No more cardboard boxes to store sutures – meeting infection control guidelines
- Have a single storage bank for all sutures
- Pegasus racks and carts can incorporate 5cm or 10cm baskets
- Lightweight baskets can be removed easily for stock rotation and restocking
- Hundreds of divider options to store any size of sutures
- Pegasus racks can be installed with any number of bays
- Baskets can be inserted into Polycarts, Salus carts or Apollo carts for moving sutures



**Angled modules and shelves allow for quick identification and improved organisation of sutures**



# Installations









# Installations











# Let NSC Support You

**BE SUPPORTED BY AN  
AUSTRALIAN COMPANY**

*PROVIDING VALUE BEYOND THE PRODUCT*

## What makes NSC different to our competitors to support you?

- A proudly Australian owned and founded company
- Combining 25 years of expertise in the healthcare industry
- Creating value for our customers beyond the product
- Working with our customers to offer specialised solutions
- Offering a large product range focused on cost effectiveness, patient care and productivity
- Low overheads allows us to provide cost savings to our customers compared to the multinationals
- Coordinated, whole company approach to every customer
- Establishing trust for long term customer relationships

## Who are we?

National Surgical Corporation (NSC) is an import manufacturer in the healthcare industry, distributing surgical instruments, consumables, equipment and shelving all major hospitals and healthcare facilities throughout Australia. Our extensive product range can be used by all specialist disciplines and departments within a hospital, day surgery or specialist centre.

## Let NSC support you and your department

Don't be afraid to change, NSC will support and assist you throughout every step. NSC has extensive training and inservicing material available and can tailor a program to meet your individual needs so that all personnel are aware of how the product operates. Switching to NSC can save you significantly and we can show you how!

## Our range includes:




Wound Drains



Electrosurgical Range



OT & General Consumables

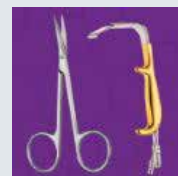

Surgical Instruments



Patient Positioning



Medichill Ice & Heat Packs



Protection Products



Cleaning & Sterilisation



Shelving & Storage



Pegasus High Density Storage

## CUSTOMER SERVICE

Contact your National Surgical Corporation Account Manager for more information

Phone: 1800 138 138 (free call)

info@nationalsurgical.com.au

[www.nationalsurgical.com.au](http://www.nationalsurgical.com.au)